



# Användarmanual

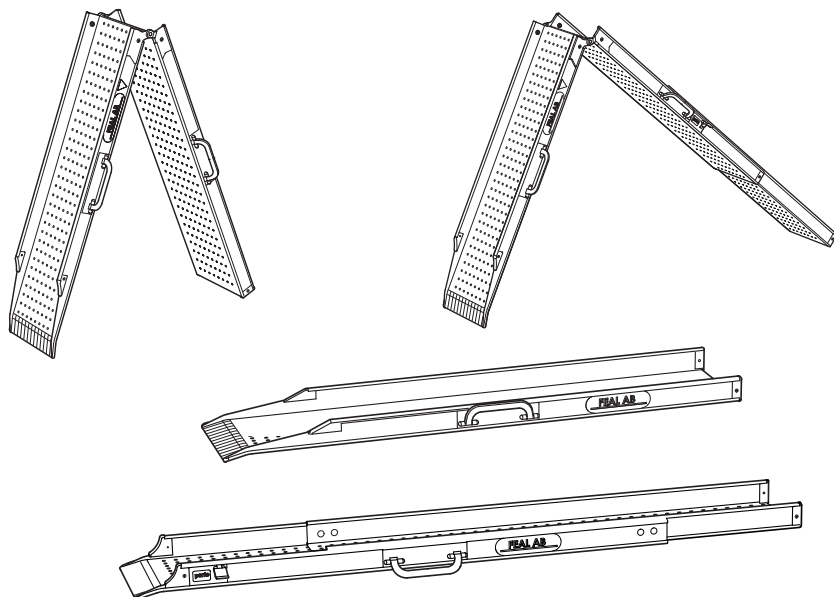



Artikelnr.	Artikelbeskrivning.
11039	T090 teleskopisk 85 cm
11041	T120 teleskopisk 119 cm
11043	T200 teleskopisk 202 cm
11044	T200-3 teleskopisk 199 cm
11047	T300 teleskopisk 288 cm
11068	X050 fast 55 cm
11070	X100 fast 116 cm
10743	F110 vikbar 111 cm
10745	F150 vikbar 151 cm
10747	F200 vikbar 200 cm
10793	FT200 teleskop o vikbar 202 cm
10795	FT300 teleskop o vikbar 277 cm
10743	FL110 vikbar låg kant 110 cm
10774	FL150 vikbar låg kant 150 cm
10775	FL200 vikbar låg kant 200 cm
11072	XW100 fast 106 cm
10799	FW200 vikbar 213 cm
10797	FTW200 teleskop o vikbar 205 cm
10798	FTW300 teleskop o vikbar 295 cm

Produkterna rengörs enklast med högtryckstvätt och om rengöringsmedel behövs rekommenderar vi vanligt handdiskmedel.

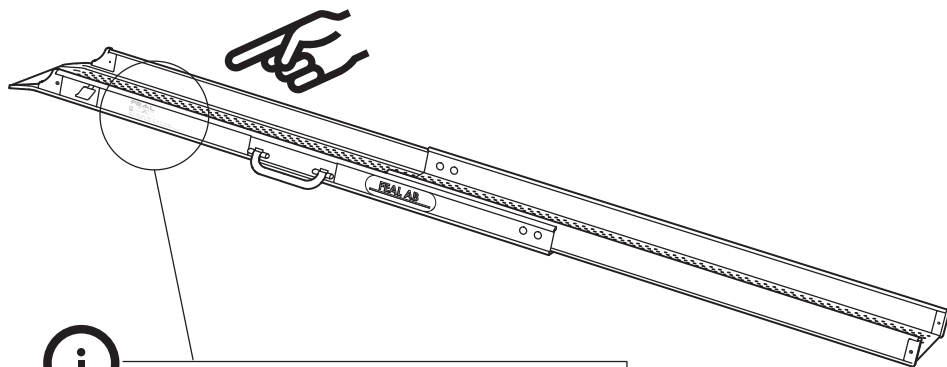



Varje ramp har en märkskylt där rekommenderad maxhöjd och max belastningsvikt tydligt syns.

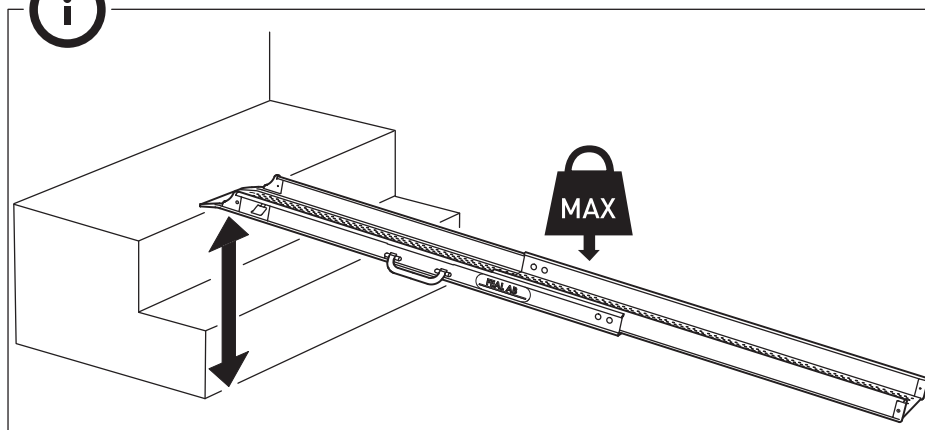

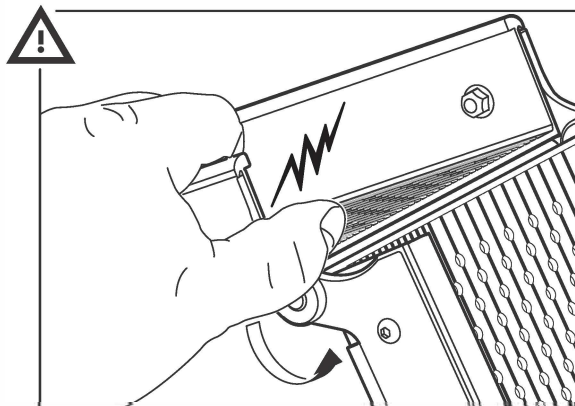

Klämrisk!

Se till att rampens övre "läpp" ligger med hela ytan mot underlaget enligt nedan.

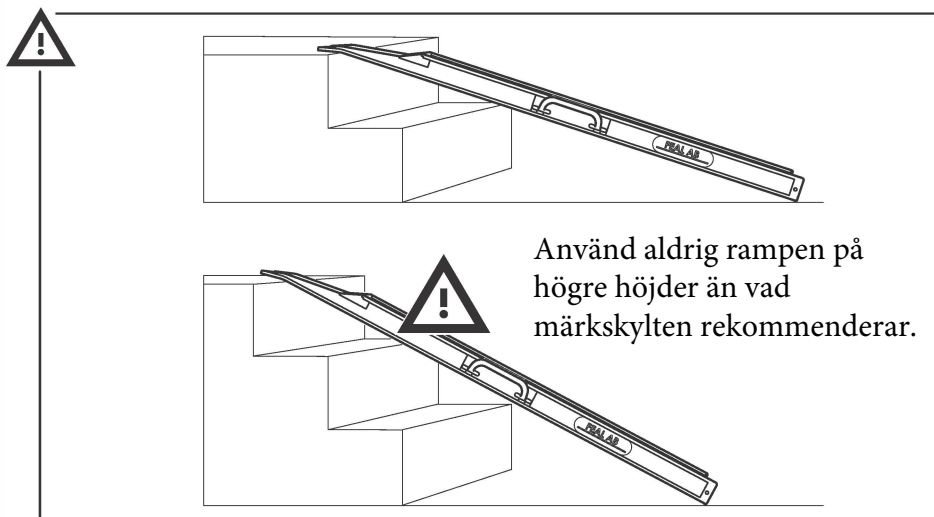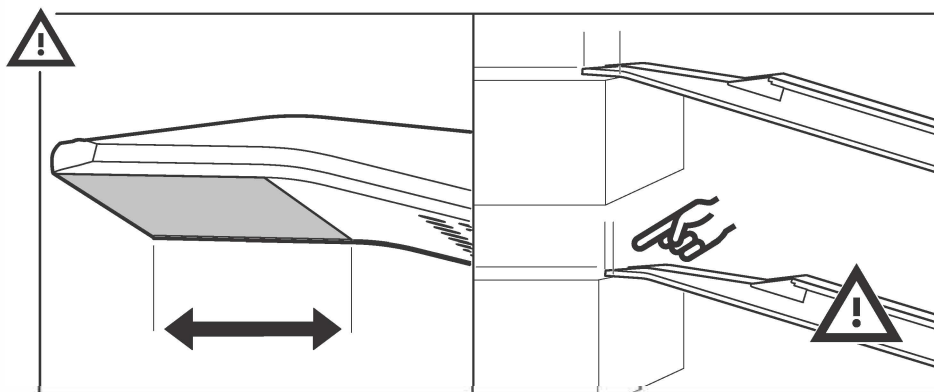

Använd aldrig rampen på högre höjder än vad märkskylden rekommenderar.

